

Barcode Scanner Configuration:

Required for a new Barcode scanner to work correctly. Applies to "Posiflex CD-2860 CCD Scanner" supplied by Computer Dynamics.

Scan codes at steps 1-4 below. At each step, listen for the "Success" sound in [square brackets].

Step 1: Start Configuration [bip-bip-bip]

Step 2: Select Terminator as "CR" (carriage return only), especially if using multi-level costing. [bip]
(NB – step 2 – use ONLY the "bottom left" code marked "CR")

Step 3: End Configuration [bip-bip-bip]

Step 4: Save Parameters [bip-bip-bip]

1

Start Configuration



2

A> Select Terminator

<CR+LF>



None



CR



LF



3

End Configuration



4

Save Parameters

