


G6-Series Installation Template

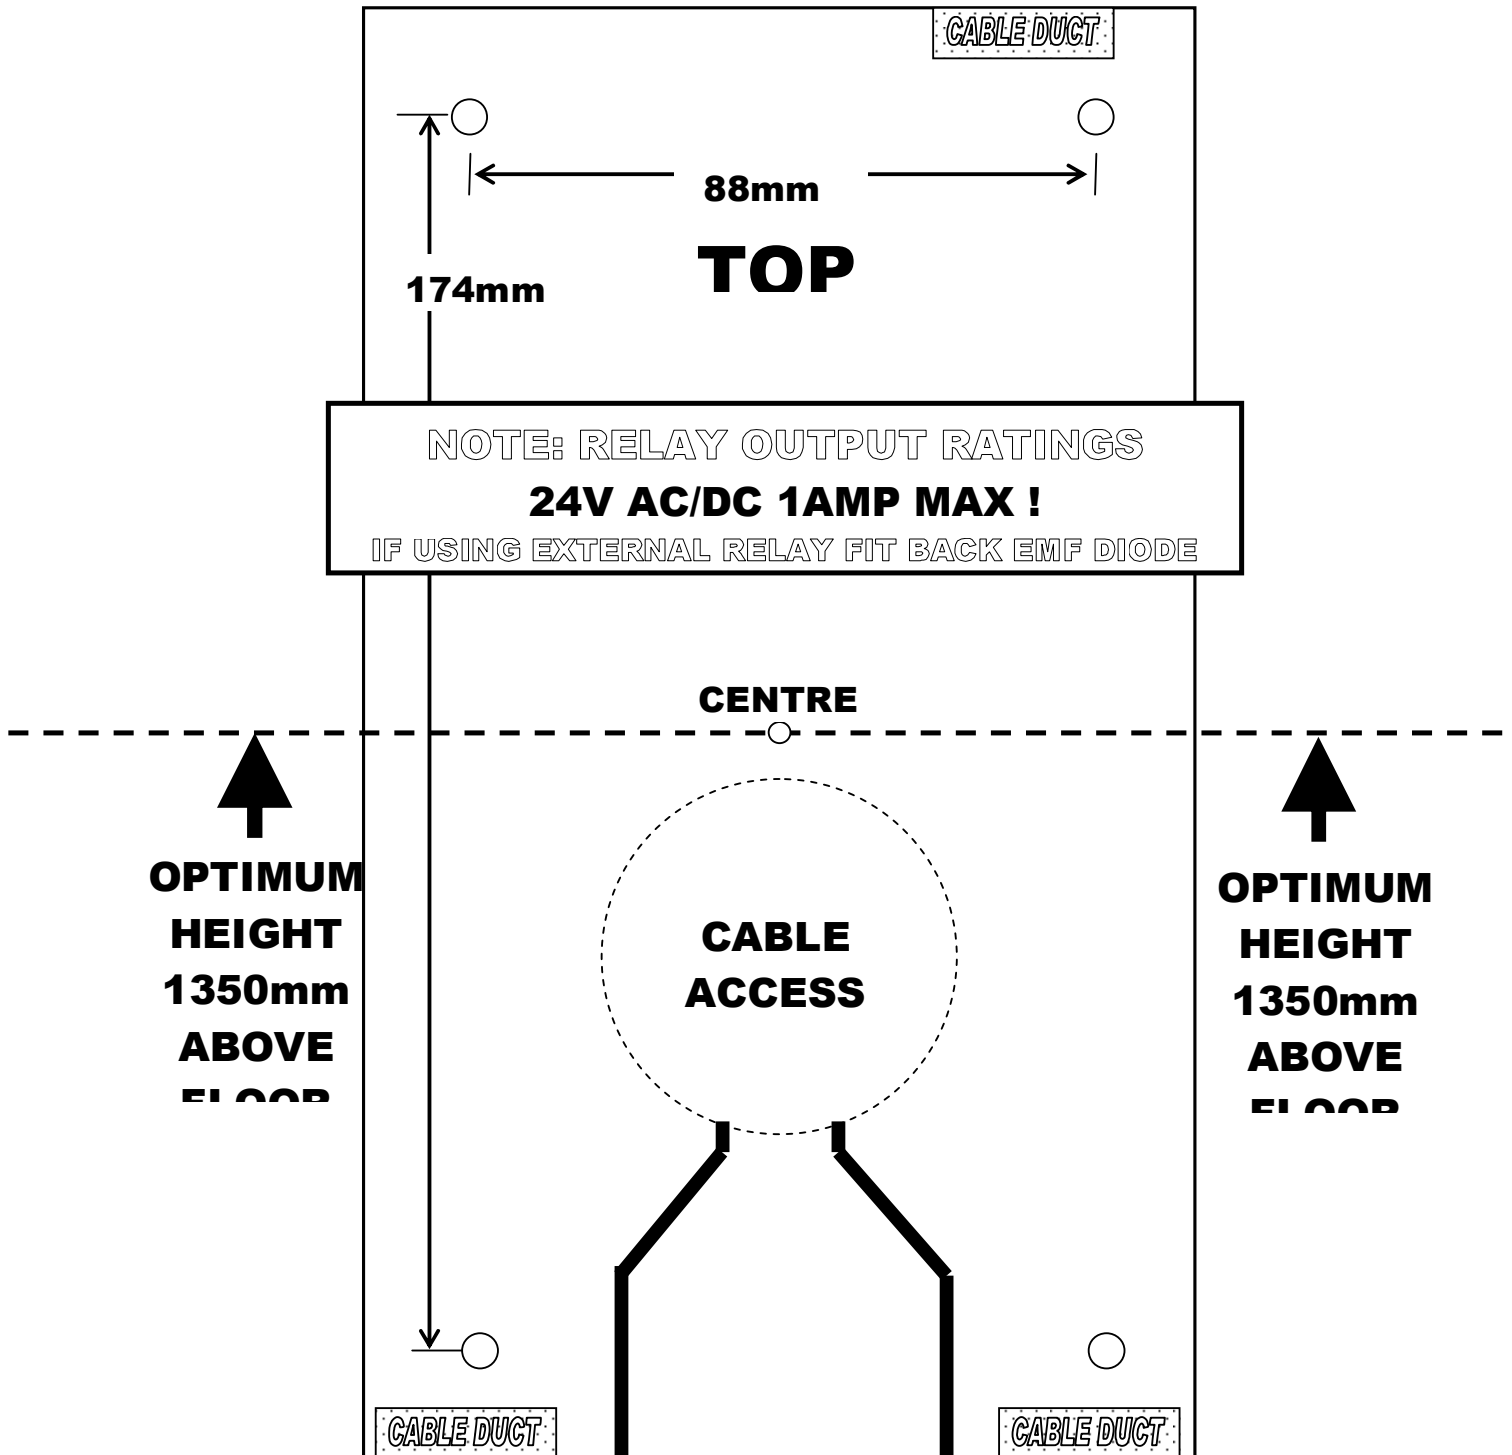

Note:

1. Once time clock is securely installed, switch **BOTH** the time clock and power pack **ON**
2. Close hinged cover, fit counter sunk security screw. **TAKE CARE NO CABLES ARE PINCHED**

'What time did you start work today....?'